

Cleaning instruction WMF 1400 Plug&Clean

Please refer to WMF 1400 User Manual.



Prior to the first cleaning read the Care chapter in the User Manual.

Observe the Overview of cleaning interval Schedule in Care chapter in the User Manual.

Never reach under the spouts while cleaning the machine.

Ensure that the mixer hose is replaced securely because hot liquid may escape.

1

* Touch clear pad

2

Additional pads are activated.
* Touch **MENUE** pad

3

* Touch (Care)

4

The Submenu (Care) appears with the options.
* Touch **Cleaning prog.**

5

* Touch **Switching off**

Select „no switching off“ here, if needed.

6

* Touch **Start**

The cleaning program starts.

7

* Pull out the cover in front of the Plug&Clean socket

6

* Insert the milk hose with the Plug&Clean adapter into the Plug&Clean socket

7.1

* Turn the adapter in the socket by 1/8 turn, clockwise, until it stops

The hose is now pointing straight downward.

8

When Step 7 is completed:
* Touch **Yes**

9

Caution.
If not connected to main drainage, place receptacle (0.9 US gal. / 3 litres) underneath.

10

* Push combi spout fully upwards
* Lift the adjustable screen

11

* Remove and empty grounds container

Caution.
Never reach into the brewing unit.

12

* Pull drip tray out and empty it
* Replace drip tray

Caution.
Without a drain connection, the drip tray must be emptied.


13

* Replace grounds container
* Lift the adjustable screen




Continue on reverse side.

14

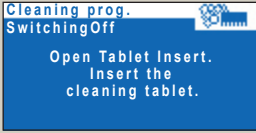


Manual insert is either in the centre between the product containers or in the centre behind the containers.

14.1



- * Open the manual insert lid
- * Add a special WMF cleaning tablet


15

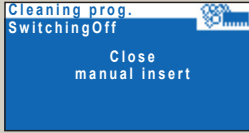

- * Close the manual insert lid


Caution. Ensure that the mixer hose is replaced securely because hot liquid may escape.

16

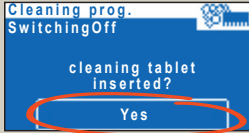


Cleaning tablet inserted?
* Touch **Yes**

17




Mixer cleaning starts.
Duration: 30 secs.

18




Plug&Clean foamer cleaning starts.
Duration approx. 2 minutes.

19



Machine cleaning starts.
Duration approx. 8 - 10 minutes.

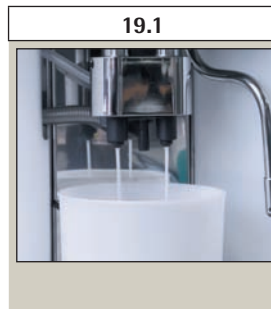

Step 7 and 8: Only if beverages containing milk have been previously prepared.


Step 17: Only if beverages containing choc or topping components have been previously prepared with the optional mixer.

- Caution:** After Plug&Clean cleaning: The cleaned milk hose can be stored with the adapter in the closed cooler.
- Foamer cleaning:** Display with foamer cleaning reminder appears
- Manual combi spout cleaning with Plug&Clean:** Perform at least once per week. See below.

Combi spout cleaning at least 1 x weekly

Caution: Prior to cleaning, switch off at ON/OFF button. Pull out mains plug.

A




- * Pull forward the lever behind the combi spout
- * Remove combi spout
- * Remove milk hose from milk container and release from combi spout

If a Mixer is fitted:

- * Release the mixer hose

Caution. Carefully disconnect the milk hose.

B



- * Dismantle combi spout
- * Soak parts of combi spout together with milk hose in the cleaning solution


If a Mixer is fitted:

- * Soak mixer hose in the cleaning solution

All parts must be completely immersed.

- * After 5 hours clean all parts thoroughly with a brush

C



- * Rinse combi spout and milk hose very thoroughly with clear water so that no cleaning fluid remains


If a Mixer is fitted:

- * Rinse mixer hose very thoroughly
- * Reassemble combi spout
- * Replace combi spout
- * Insert milk hose

If a Mixer is fitted:

- * Insert mixer hose

Foamer Cleaning

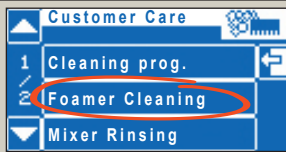


Foamer cleaning only

- * On submenu (Care) touch **Foamer Cleaning**

See steps 6 to 8 and 18.

Mixer Rinsing

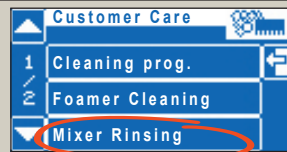

Mixer rinsing only

- * On submenu (Care) touch **Mixer Rinsing**

Mixer rinse runs for 30 secs.