

Brief Instruction "Cleaning"

Please refer to WMF bistro User manual.

- Prior to the first cleaning read the Care chapter in the User Manual.
- Observe the Overview of cleaning interval Schedule in Care chapter in the User Manual.
- Never reach under the spouts while cleaning the machine.
- Ensure that the mixer hose is replaced securely because hot liquid may escape.

Cleaning Program Standard

1 * Touch MENUE pad	2 * Touch (Customer Care)	3 * Touch Cleaning prog.	4 * Touch SwitchingOff	5 * Touch Start <i>Cleaning program sequence starts.</i>
6 * Provide 30.51 cin of clear, cold water in a receptacle * Insert milk hose * Touch Continue	6.1 * Empty the grounds container	7 * Empty the grounds container	7.1 Caution. Never reach into the brewing unit.	8 * Open the manual insert * Insert a WMF special cleaning tablet Caution. Never reach under the spouts while cleaning the machine.
8.1 Caution. Ensure that the mixer hose is replaced securely because hot liquid may escape.	9 * Close the manual insert * Touch Yes	10 <i>Milk system rinse starts. Duration approx. 30 secs.</i>	11 <i>The choc system rinse starts. Duration approx. 30 secs.</i>	
11.1 	12 <i>Machine cleaning starts. Duration 8 mins.</i>	12.1 		

Step 6 and 10:
Only after dispensing of milk beverages.

Step 11:
Only after dispensing of choc beverages (with optional mixer system).

Milk system rinse

 * Touch on milk system on submenu * Touch on Start	 * Provide 30.51 cin of clear, cold water in a receptacle * Insert milk hose * Touch Continue	 <i>Milk system rinse starts. Duration approx. 30 secs.</i>
---	---	--

Choc system rinse

 * Touch on choc system on submenu * Touch on Start	 <i>The choc rinse starts. Duration approx. 30 secs.</i>
---	---



Cleaning program Plug&Clean

1

* Touch **MENU** pad

2

* Touch (Customer Care)

3

* Touch **Cleaning prog.**

4

* Touch **SwitchingOff**

5

* Touch **Start**
Cleaning program sequence starts.

6

* Plug the connection of the milk hose onto the Plug&Clean adapter
* Touch **Continue**

6.1

Attention! Do not jam the milk hose!

7

* Open the manual insert
* Insert a WMF special cleaning tablet
* Close the manual insert
* Confirm with **OK**

8

* Empty the grounds container

8.1

Caution. Never reach into the brewing unit.

9

The Plug&Clean Cleaning starts.
Duration approx. 2 mins.

10

The Choc system rinsing starts.
Duration approx. 30 secs.

10.1

11

The machine cleaning starts.
Duration approx. 8 mins.

11.1

Step 8-9: Only after dispensing of milk beverages.

Step 10: Only after dispensing of choc beverages (with optional mixer system).

- After the Plug&Clean cleaning:** The cleaned milk hose along with the adapter can be stored in a closed refrigerator.
- Milk system rinse:** See the flip-side under "Milk system rinse" for interim cleaning.
- Manual cleaning of the combi spout with Plug&Clean:** Run at least 1 x per week. See below.

Manual combi spout cleaning Prior to cleaning switch off at ON/OFF button. Pull out mains plug!

A

- * Pull forward the lever behind the combi spout
- * Remove combi spout
- * Remove milk hose from milk container and release from combi spout
- * If a mixer hose is fitted remove it too

Caution. Carefully disconnect the milk hose.

B

- * Mix 0.31 cin of WMF special cleaner with 30.51 cin warm water
- * Dismantle combi spout
- * Soak parts of combi spout together with milk hose in the cleaning solution
- * All parts must be completely immersed.
- * After 5 hours clean all parts thoroughly with a brush

C

- * Rinse combi spout and milk hose very thoroughly with clear water so that no cleaner fluid remains
- * Reassemble combi spout
- * Replace combi spout
- * Replace milk hose and mixer hose

Machines with pinch valve: remove milk hose. Replace in reverse order.

1

2

* Pull forwards with both hands

2.1

3

* Remove upwards from the pinch valve

3.1