

Cleaning instruction WMF 1400 Powder Milk Option

Please refer to WMF 1400 User Manual.



Prior to the first cleaning read the User Manual, "Customer care" chapter.

Consider the Overview of Cleaning Interval Schedule in "Customer care" chapter in the User Manual.

Never reach under the spouts while cleaning the machine.


Ensure that the mixer hose is placed securely because hot liquid may escape.

<p>1</p> <p>* Touch clear pad</p>	<p>2</p> <p>Additional pads are activated. * Touch MENU pad</p>	<p>3</p> <p>* Touch (Customer Care)</p>	<p>4</p> <p>The menu (Customer Care) appears with 2 cleaning options. * Touch Cleaning prog.</p>	<p>5</p> <p>* Touch Switching off The mixer rinsing program starts.</p>
<p>6</p> <p>Mixer rinsing. Duration: 30 secs.</p>	<p>7</p> <p>* Touch Start The cleaning program starts.</p>	<p>8</p> <p>See steps 9 to 11.</p>	<p>9</p> <p>* Push combi spout fully upwards * Lift the adjustable screen</p>	<p>10</p> <p>* Remove and empty grounds container</p> <p> Caution. Never reach into the brewing unit.</p>
<p>11</p> <p>* Pull drip tray out and empty it * Replace drip tray</p> <p> Caution. Without a drain connection, the drip tray must be emptied.</p>	<p>12</p> <p>* Replace grounds container * Close the adjustable screen</p>	<p>13</p> <p>Manual insert is either in the centre between the product containers or in the centre behind the containers.</p>	<p>13.1</p> <p>* Open the manual insert lid * Add one special WMF cleaning tablet</p>	<p>13.2</p> <p>* Close the manual insert lid</p>



Continue on reverse side.

14

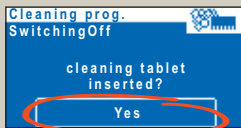


Cleaning prog. SwitchingOff

cleaning tablet inserted?

Yes

Cleaning tablet inserted?
* Touch **Yes**

15

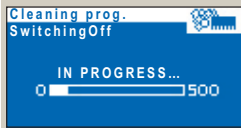


Cleaning prog. SwitchingOff


IN PROGRESS...

0 500

Machine cleaning starts.
Duration approx. 7 minutes.

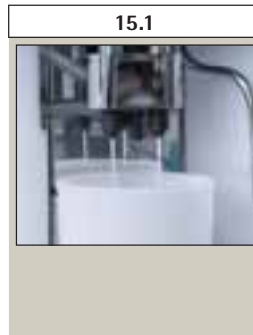

15.2



If machine is not connected to main drainage place a receptacle (.5 gallons) underneath the spout.

Step 6:
Only if beverages containing choc or topping components have been previously prepared.


Mixer cleaning at least 1 x per week



Cleaning frequency will depend on powder used.

Switch off the coffee machine with the ON/OFF button and disconnect mains plug prior to cleaning

A




- * Turn stud on bayonet fitting underneath the mixer bowl clockwise.


The mixer jug is released from the arrester lock.

- * The propeller for the mixer is now visible and can be cleaned with a cloth
- * Dismantle two-piece mixer jug


- * Remove milk cover
- * Pull off mixer hose from mixer to combi spout

*  **Caution!**
Carefully disconnect the milk hose.

B





- * Dismantle two-piece mixer jug
- * Clean both parts of mixer jug and mixer hosing under warm running water
- * 1 x weekly:
- * Mix 5 ml of WMF special cleaner with 17 US fl. oz (0.5 l) of warm water
- * Soak mixer and mixer hose in the cleaning solution
- * Rinse mixer hose very thoroughly

* 


C

- * Reassemble all components
- * Replace mixer jug
- * Turn stud on bayonet connector back counter-clockwise
- * Push mixer hose with spring onto mixer jug fitting again and plug in combi spout
- * Run Mixer Rinsing (see part Mixer Rinsing)


 On reassembly all openings must face in the same direction

 Ensure that mixer hose is replaced securely. This is important, as otherwise hot liquid from the mixer may escape.

Mixer Rinsing

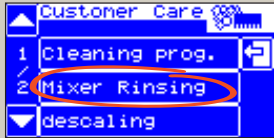

Mixer rinsing only

- * On submenu  (Care) touch **Mixer Rinsing**

Mixer rinse runs for 30 secs.

